

Factory reset : long press until "Restarting..." dialog appears on screen

Connection Diagram





Access Web Configuration

• Make sure your laptop and Hyshare Pro are on the same network.



Hvshare Pro





Connect laptop to Hyshare Pro through organization network

2 Type in Station IP in a web browser.

Station IP can be found on the Standby Screen.

The IP address is https://192.168.63.1 by default.

- **3** Type in configuration page password. The password is admin by default.
- ① For security purpose, please change the default password of your Station.

Firmware Update

OTA Update

- Make sure your laptop and Hyshare Pro connect to the organization network
- 2 Log in to the web configuration page. (See Access Web Configuration for more details.)

3 Go to Administration Tab and click the "Check for update" button.

• Click the "Update" button to begin the firmware update process

Manual Update

• Make sure your laptop and Hyshare Pro are on the same network.

- 2 Log in to the web configuration page. (See Access Web Configuration for more details.)
- Go to Administration Tab and click the "Browse" button to select the file.

• Click the "Update" button to begin the firmware update process



Start Sharing

Sharing through Hyshare Pro App

1. Download

Windows / macOS

Go to Hyshare Pro web configuration page to download the Hyshare Pro App for your device.

Android



Search for Hyshare Pro App in Google Play.

iOS

Search for Hyshare Pro App in App Store or cast through AirPlay

2. Connect

- **1** Launch the Hyshare Pro App.
- **2** On the Station list, find the "Station Name" shown on the Standby Screen
- **3** Click the toggle to connect to the right Station.
- (!) If the name does not appear on the Station list, switch your Wi-Fi to the network with the same name (SSID) as the Station name.

Hyshare Pro	*
Station list	
Station name or IP address	ര
🚖 BoardRoom	a
★ MeetingRoom-01	0
★ MeetingRoom-02	0
★ MeetingRoom-03	0

3. Present

Click play button () to start screen sharing.



Sharing through Web Browser (for Windows)

Type in the Station IP in a web browser.

Station IP can be found on the Standby Screen.

- **2** Click "Start" to begin sharing the screen.
- (!) Web browser sharing is only available in Chrome and Edge browsers.

Thank you for choosing Hyshare Pro. For more infomation, please visit www.cypress.com.tw