



Unpacking

Before you begin using the device, please check the version you got and ensure that the following items are included in the shipped box:

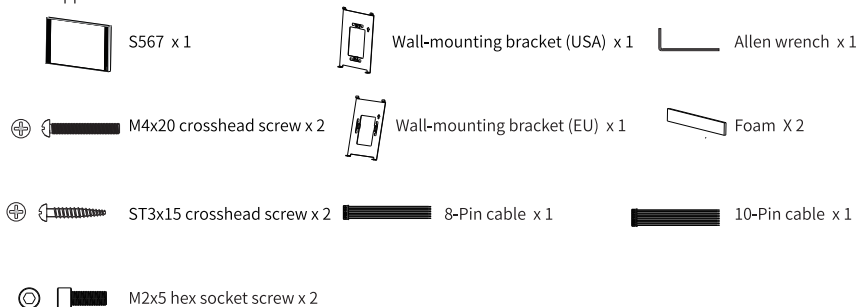

Product Overview

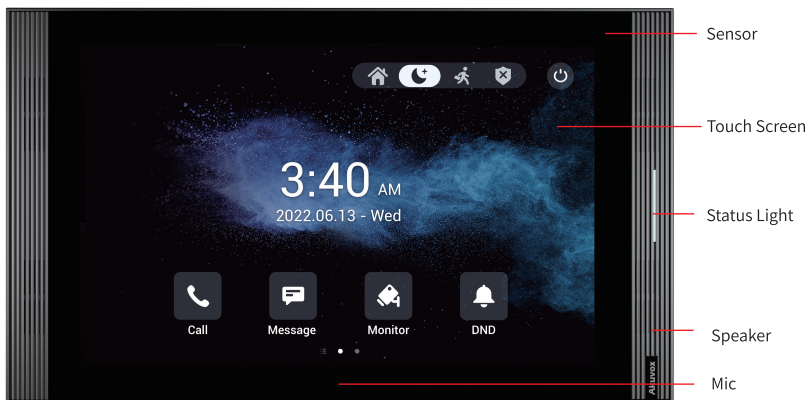


S567


Installation

Step 1: Bracket Installation

With 86/118 junction box in the wall

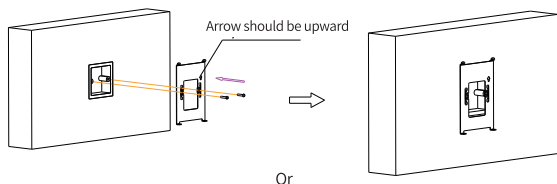


Fix the wall-mounting bracket on the 86 embedded box with two M4x20 crosshead screws, please ensure the bracket against to wall.

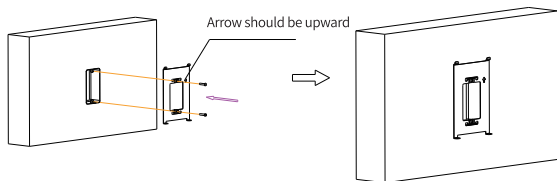

Fix the wall-mounting bracket on the 118 embedded box with two M4x20 crosshead screws, please ensure the bracket against to wall.


With round junction box in the wall

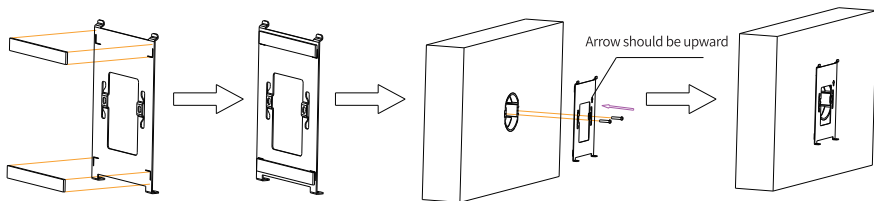


Stick two foams onto the wall-mounting bracket as shown in the pictures if the edge of round junction box line up with wall. It is no need to stick the foam if the edge of round junction box is lower than wall.

Fix the wall-mounting bracket on the round embedded box with two ST3x15 crosshead screws, please ensure the bracket against to wall.




Step2: Device Mounting

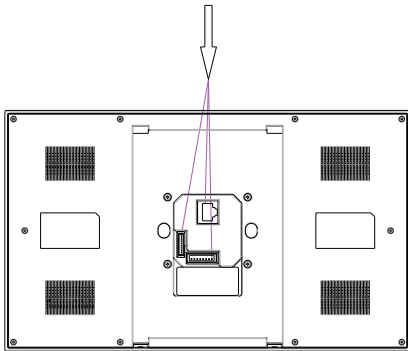


Plug the cables from the wall into corresponding interface on the back cover to test the device whether works properly.

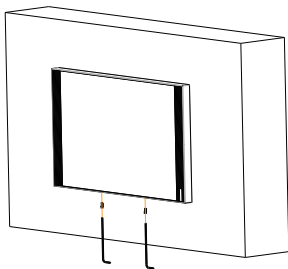

Use Allen wrench fix two M2x5 hex socket screws into the bottom of the device. And the installation is done.

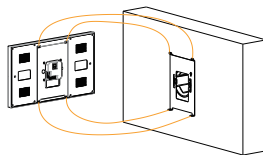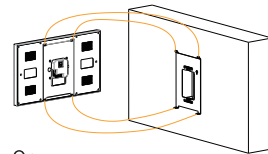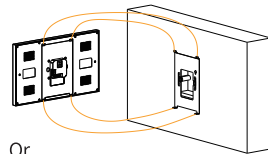


Tilt the device 15° and align the grooves on the back cover with the hooks on the bracket.

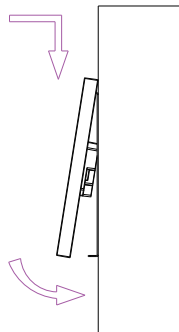


Then press down the device and make it against the wall.

Device Removal

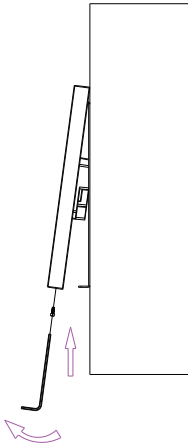


Use Allen wrench to unscrew the two M2x5 hex socket screws on the bottom of the device, then tilt the device 15° as shown in the picture and push up it to remove the device.

Device Wiring

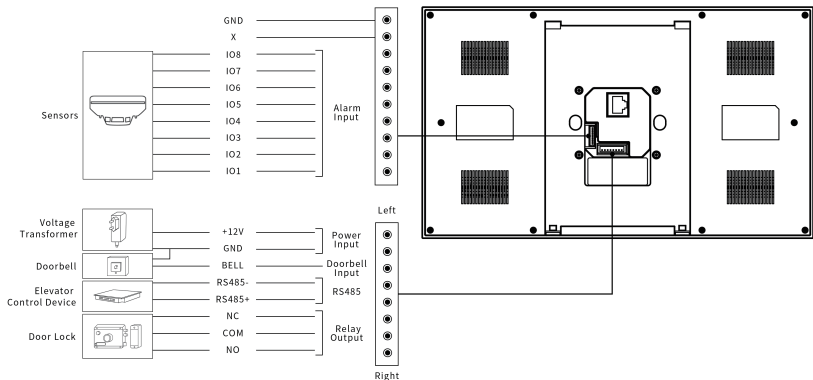

Application Network Topology

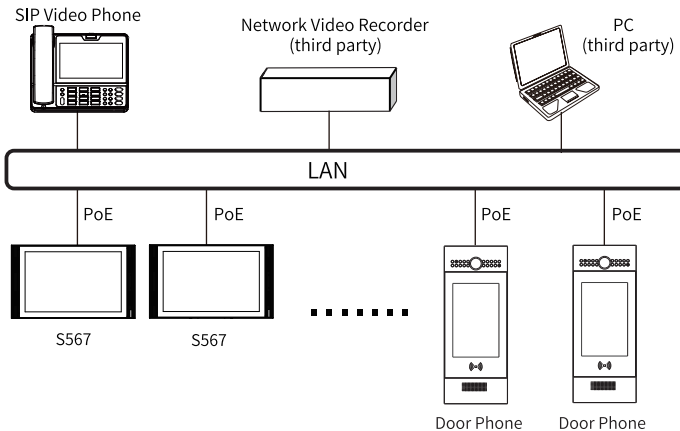

Configuration



1. Access Basic Information: After setting up network and power, enter **Setting > System Info** to check Account, Network, Version status.
2. Access the Website: Launch a browser and type in the IP address then enter the username and password to login (username/password: admin /admin by default).
3. Account Registration: On web UI, go to the path: **Account > Basic** page to fill in the account information, click **Submit** to confirm (please refer to user manual for more information).

Operation

Make a call:

Enter the callee's number or room address, then press **Dial**  **icon** to make an audio call or press **Video**  **icon** to make a video call. Press  **icon** to hang up.

Receive a call:

Press  **icon** to pick up the incoming call in video or press  **icon** to pick up the call in audio mode.

Unlock:

During the talk, you can press **Unlock**  **icon** on the talking interface to unlock the door.

Monitor:

Press **Monitor**  **icon** to receive the video from the door phone or from third-party devices.

Notice Information

Akuvox S567 firmware contains third-party open source software under the terms of the GNU General Public License (GPL). Akuvox is committed to meeting the requirements of the GNU General Public License (GPL) and will make all required source code available.

The source code of software under the terms of GNU GPL can be downloaded online, <http://www.akuvox.com/gpl>.

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox's website: <http://www.akuvox.com> © Copyright 2022 Akuvox Ltd. All rights reserved.



AKUVOX (XIAMEN) NETWORKS CO., LTD.
Add.: 10/F, NO.56 GUANRI ROAD, SOFTWARE PARK II, XIAMEN 361009, CHINA
www.akuvox.com



YS56700001