



1. Strip back approximately 40mm (1.5") of the cable sheath.  
Cut the filler to root.

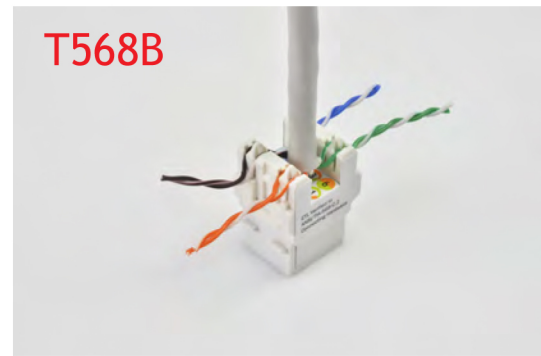


2. Seat the wires into the wire slots according to the wire scheme.

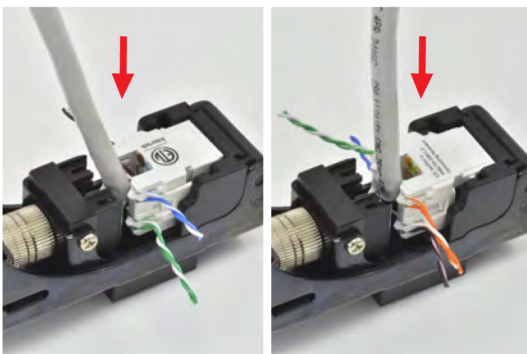


3. Put the keystone jack onto the termination tool in the right position.

**NOTE:** The keystone jack can be placed by 2 different directions.

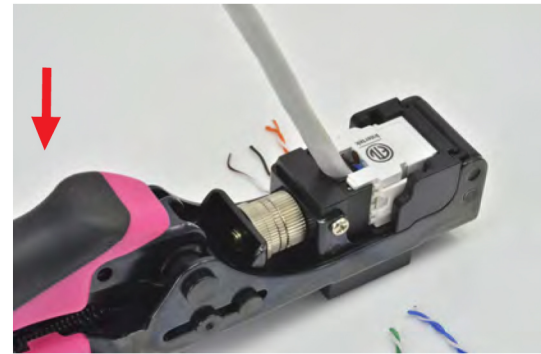

4. Squeeze the tool then terminate all wires and trim the excess wires at the same time.

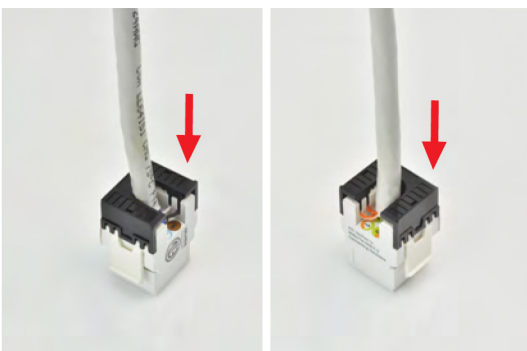

5. Place the cap over the wires onto the IDC.

**NOTE:** The cap be placed by 2 different directions by needed.



6. Completion.