R8010 INSTALLATION INSTRUCTIONS

Disconnect Slides

Base

Swivel Assembly

Remove Travel Lock Panel
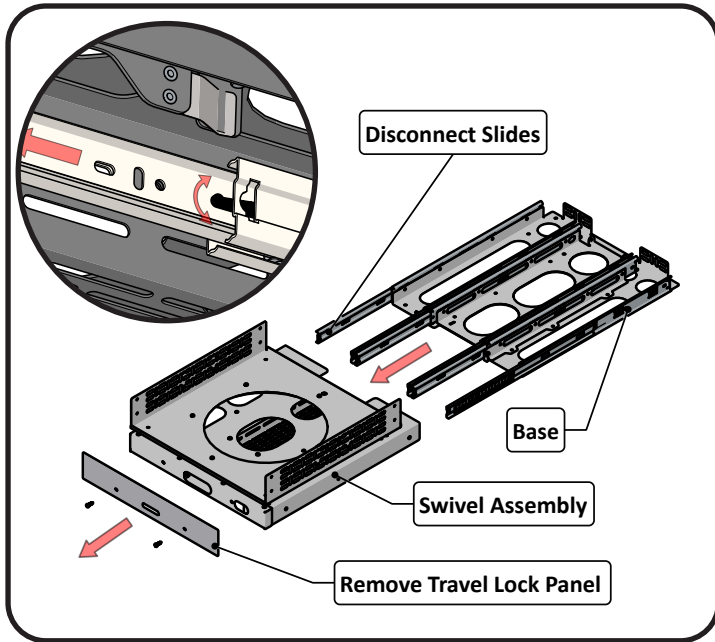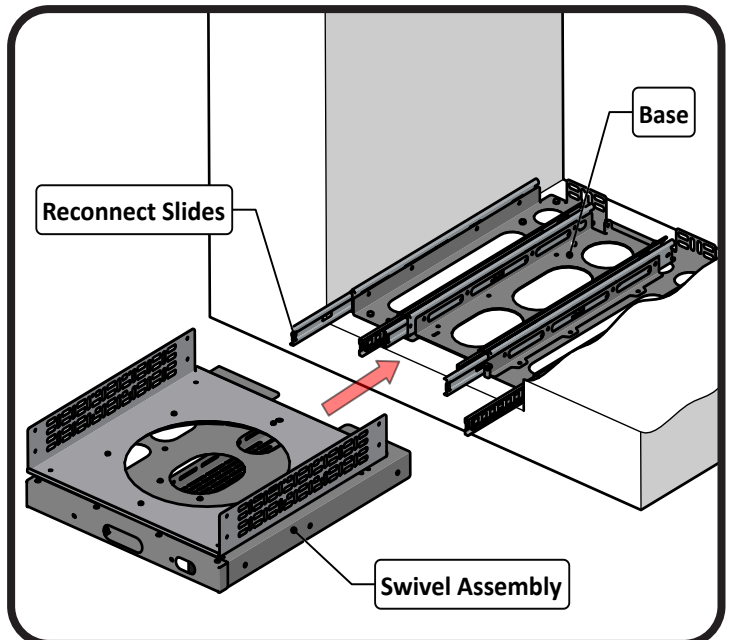
1. Remove Travel Lock Panel & Disconnect Slides
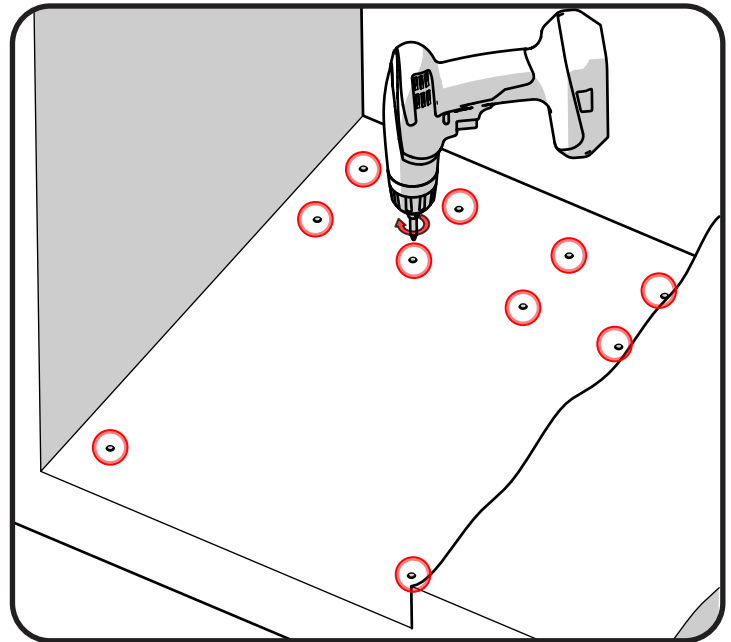
2. Drill Fixing Holes (See Drawing on Reverse)

Base Fixings
(Not included)
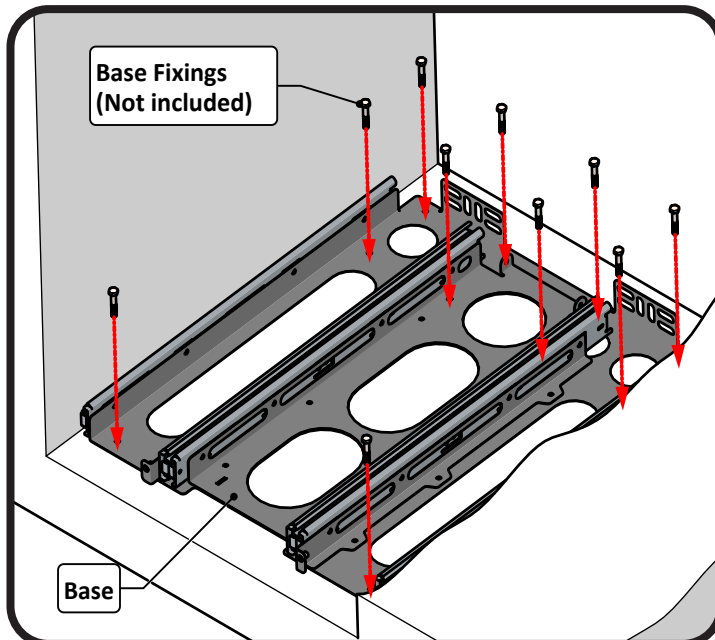
Base

3. Securely Fasten Base to Floor of Cupboard

Base

Reconnect Slides

Swivel Assembly

4. Install Swivel Assembly & Reconnect Slides

Cable Tray

M5 Nut

M5 Washer
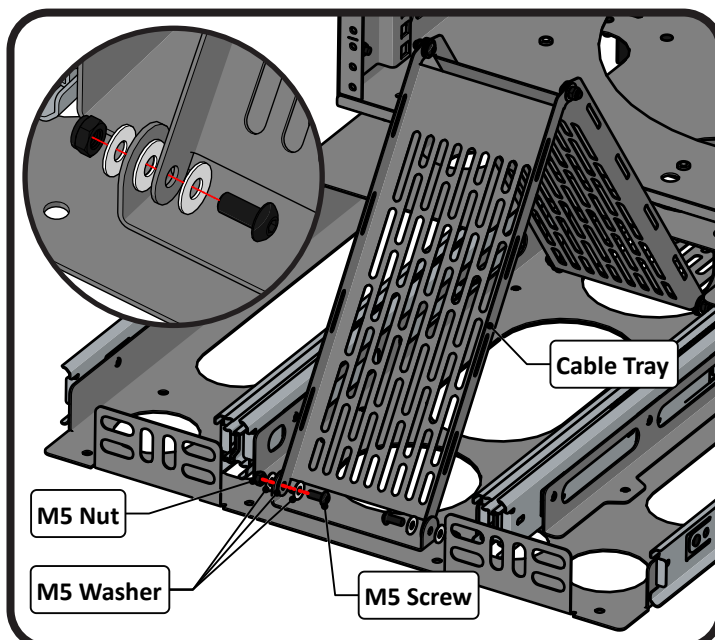
M5 Screw

5. Optional: Install Cable Tray

Frame Top

Rack Strip

Swivel Assembly
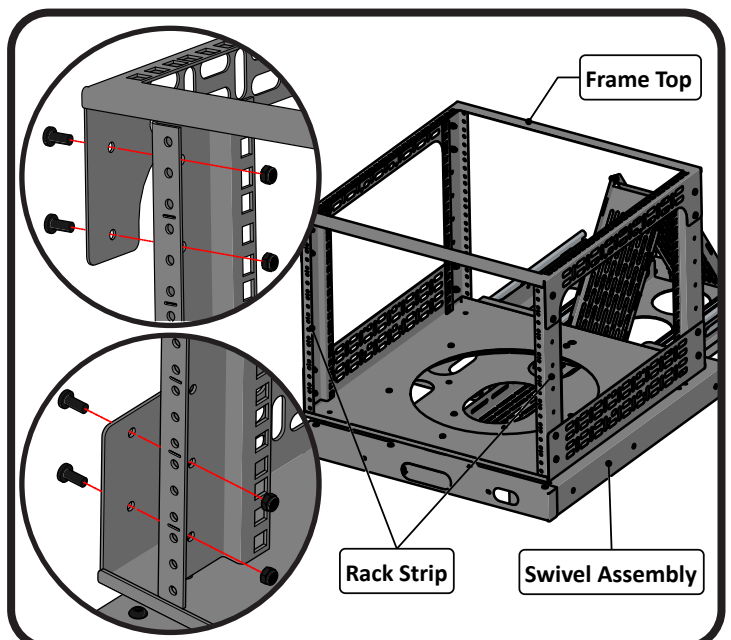
6. Assemble Rack Frame with M5 Screws & Nuts

R8010-INSTRUCT

R8010

R8010 INSTALLATION
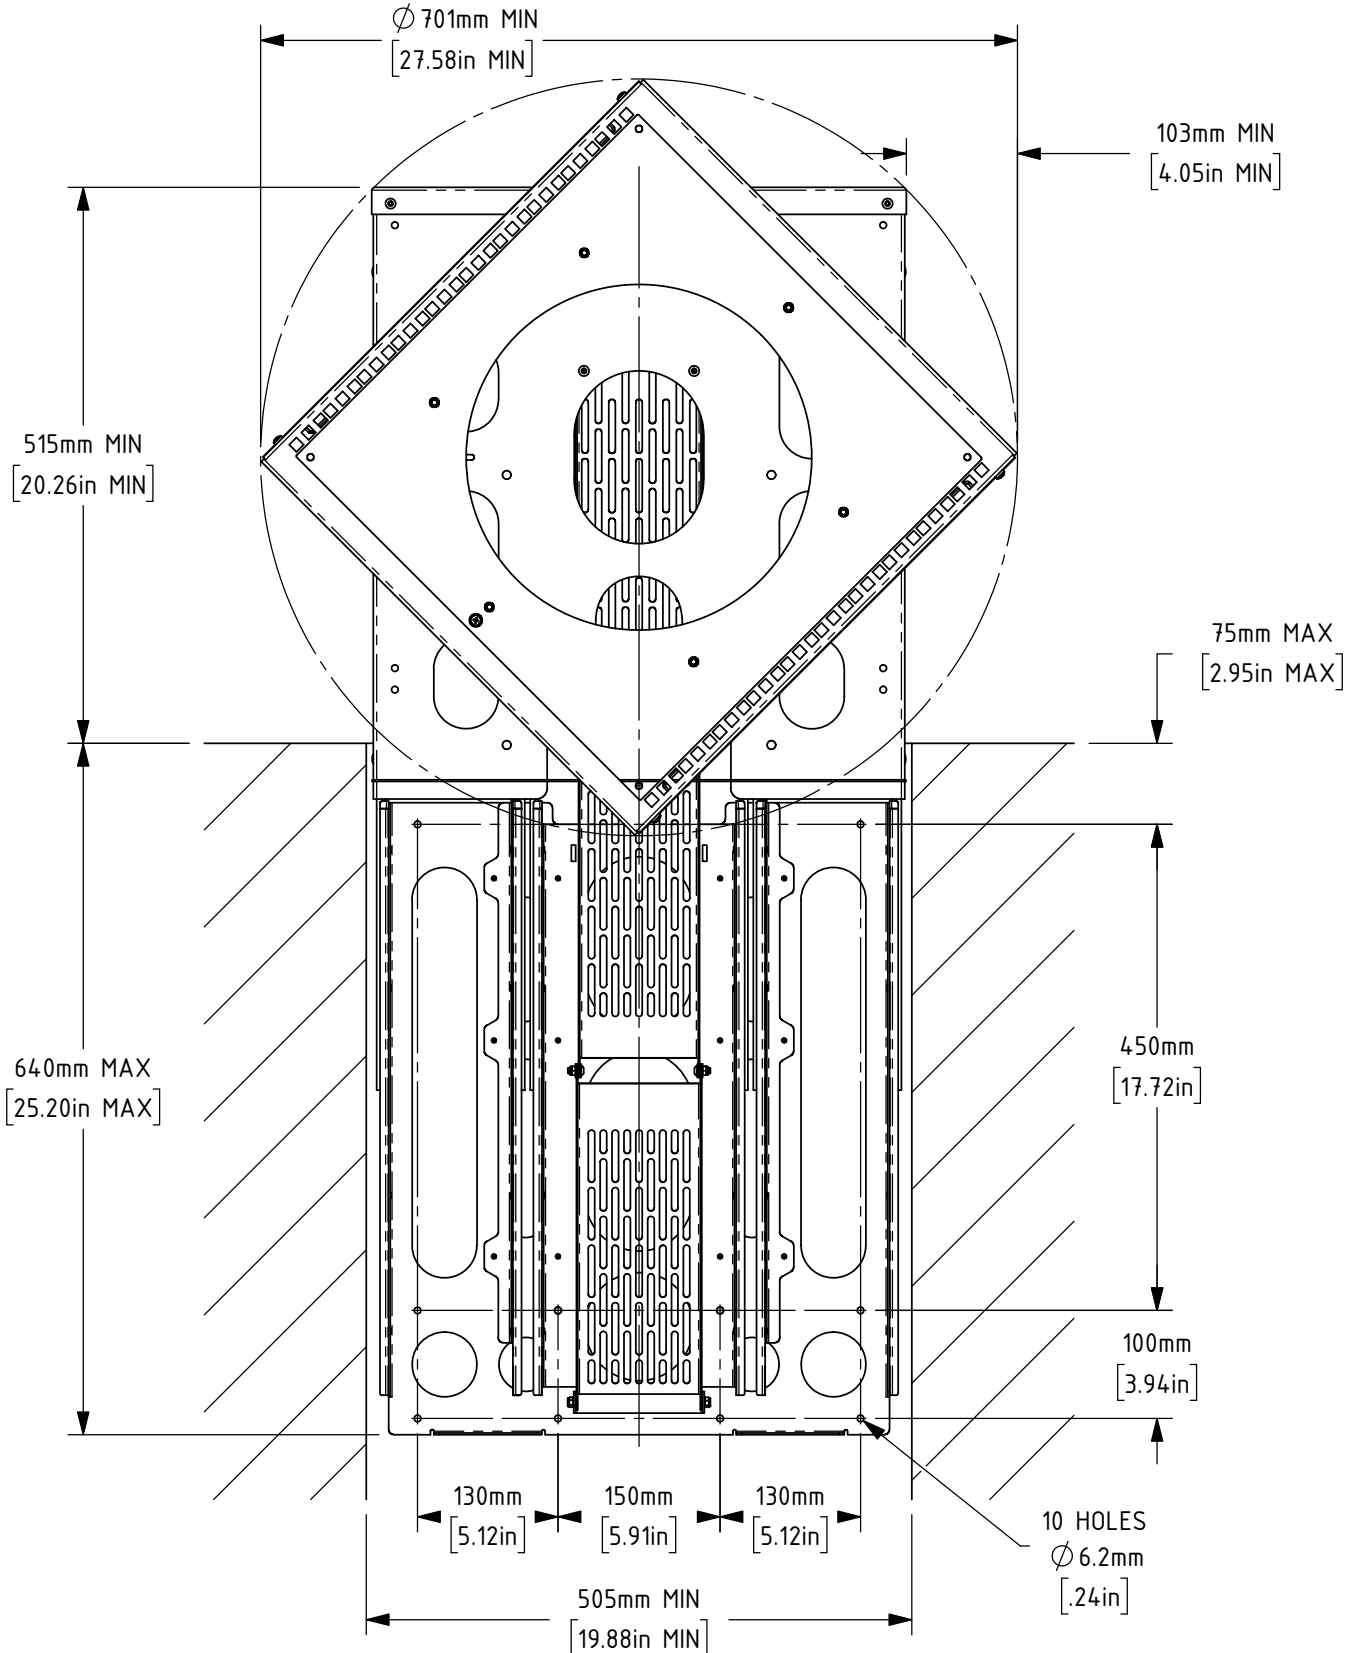
∅ 701mm MIN
[27.58in MIN]

103mm MIN
[4.05in MIN]

515mm MIN
[20.26in MIN]

75mm MAX
[2.95in MAX]

450mm
[17.72in]

640mm MAX
[25.20in MAX]

100mm
[3.94in]

130mm
[5.12in]

150mm
[5.91in]

130mm
[5.12in]

10 HOLES
∅ 6.2mm
[.24in]

505mm MIN
[19.88in MIN]

Web: www.penn-elcom.com   E-Mail: info@penn-elcom.com

R8010-INSTRUCT